


KCVR Installation Instruction

The following is a list of all items included in the KCVR option kit.

1. 1 - keypad cover [20-00139-01]

If any of the items listed above are missing please contact Eason Technology before installing option

1. Remove the four 4/40 button head hex screws.
2. Remove existing bezel and set aside.

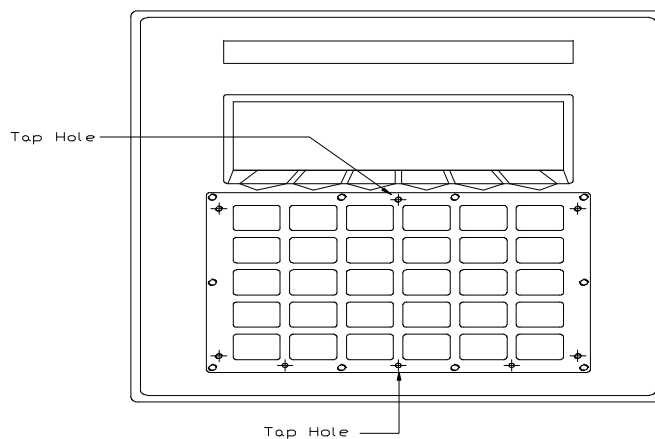

4. Set the keypad cover over the keys making sure that all the keys are flush with bottom side of keypad cover.
5. Install keypad cover bezel using the four 4/40 button head screws.
6. Press all keys to make sure that cover does not impede the travel of the keys.
7. Connect the option cable to the connector header on the Model 1100 CPU board, making sure to observe the polarizing tab on the cable and its placement onto the connector header. If you have 2 options on your 1100 connect the middle connector of the Double Option Cable to the option mounted in the top position.