

WHAT IS HERE?

Confirm each item has been included with the shipping.



VTWIN Software CD

Use this CD to install the VTWIN software.



Demo & Tutorial CD

Use this CD for software and hardware manuals, tutorials, getting started and other product info.




Programming Cable

This is the programming cable between your PC and ESA VT unit.



This Ship Kit Page

This page will show you all the resources available to quickly get started in programming your VT HMI.

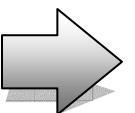

WHAT NEXT?

1 Install the VTWIN Software

Insert “ESA VTWIN” CD into your PC, follow steps for installation.

2 Connect your PC to VT HMI with the Programming Cable

Connect programming cable to 25-pin MSP on the unit, and connect 9-pin connector to available port on your PC.

3 Power up your VT HMI, place into transfer mode (see hardware manual for specifics of your model)

For touch-screen models, this means quickly touching upper right, and then touching lower-left of the screen.


For keypad models, this means holding down F5 as the unit is plugged in/boots up.

4 Insert the Demo & Tutorial CD into your PC, and open the “Quick Start” for VTWIN Software


Use the pop-up menus or browse the CD, and open the quick-start guides and tutorials for your range of products. (Text unit, touch unit, high power touch unit).

5 Follow steps in Quick Start for getting a program into your unit.

Load the quick-start tutorial specific to your VT product. The tutorial will show you the appropriate menus for getting a project open, compiled, and loaded into a unit.

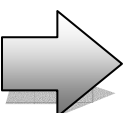

GETTING STARTED ROAD MAP

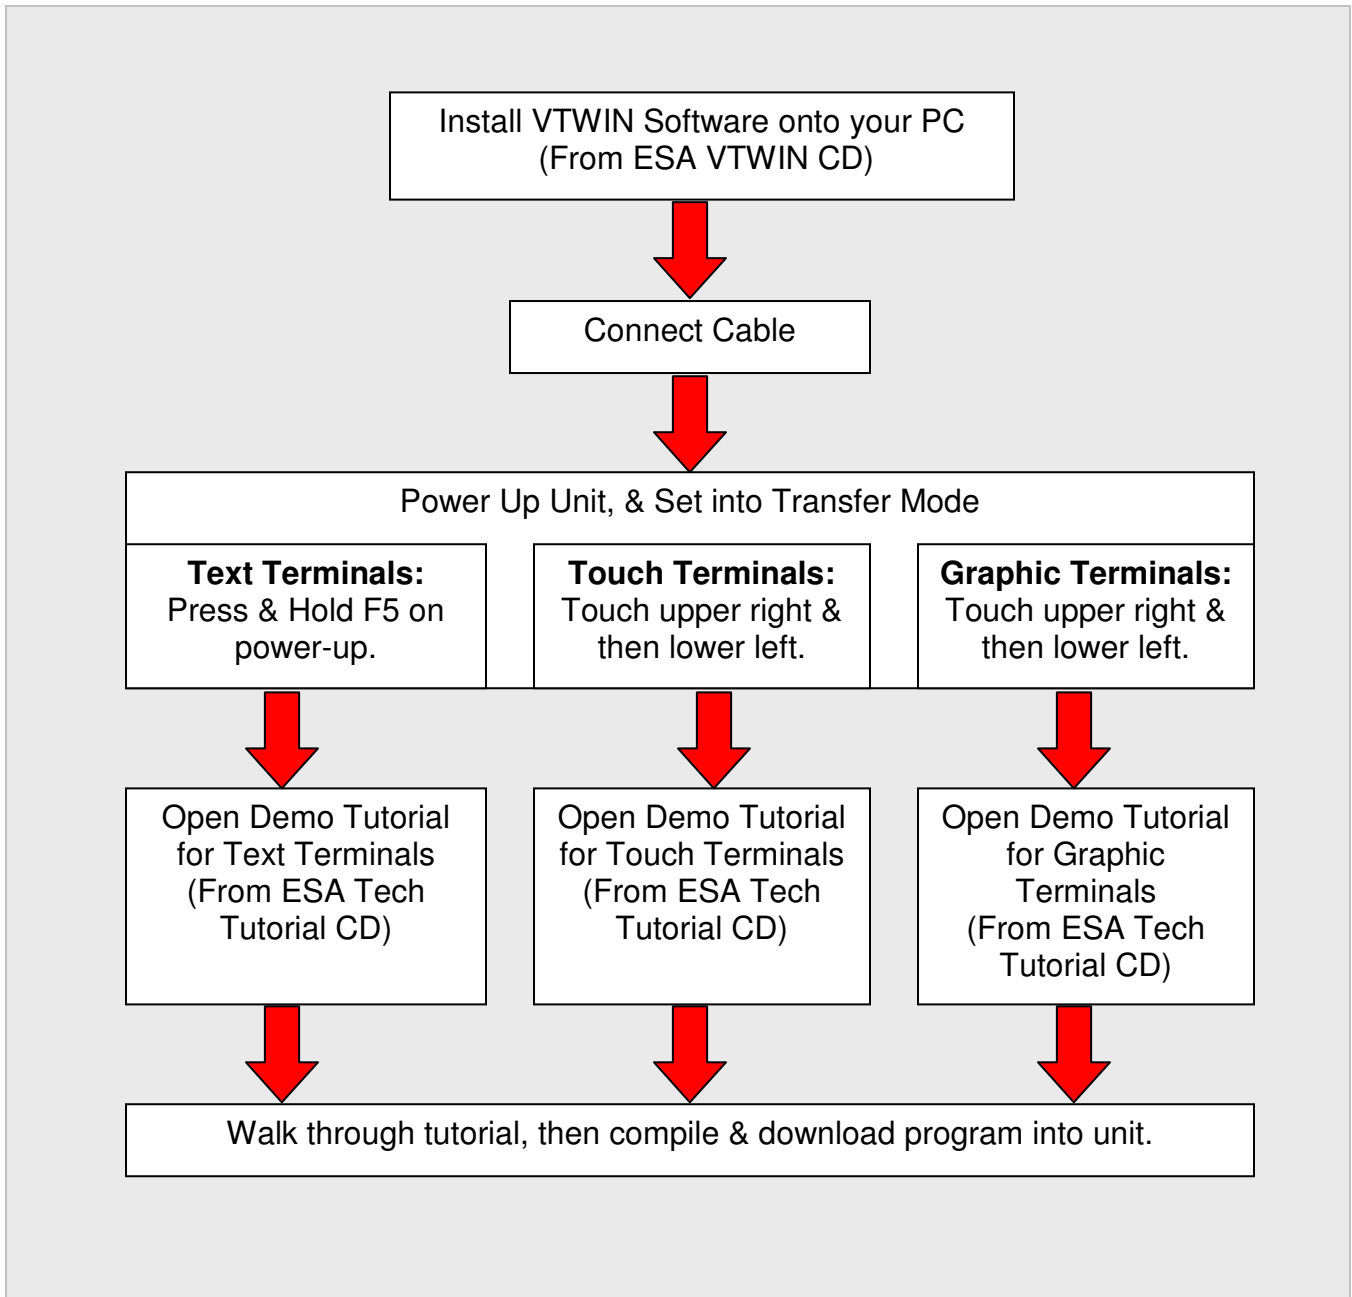

ESA Technology, Inc
7975 Cameron Drive, Bldg 300
Windsor, CA 95492
Ph: 707-837-0120
Fax: 707-837-2742
www.esatechnology.com

