


The addition of a barcode scanner can make entry quicker and more reliable. The Eason 2000 Family makes it easy to connect to a barcode scanner.

BARCODE SCANNERS


Connecting up:

Just plug a barcode scanner into the keyboard port on your Eason unit, and operate as normal!

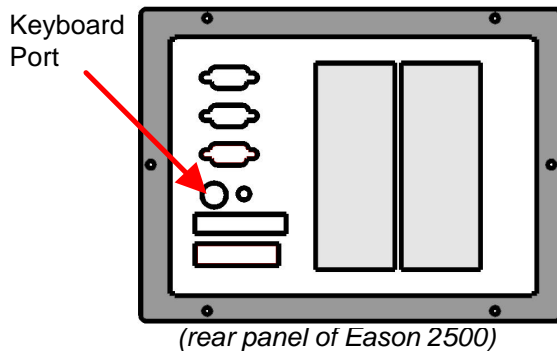

Programming:

No need to modify any application code. The scanner will work just as if someone had typed on a keyboard, or entered a value onto the screen. Most scanners even include a carriage return to finish “entering” the data when it is scanned.

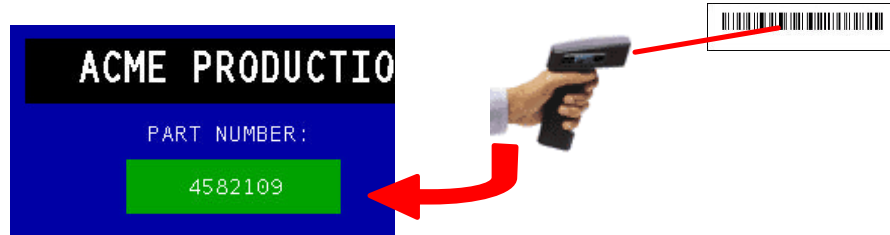

Now you can use a barcode scanner to select parts, load recipes, or log production data quickly and reliably.

Note: if you have more than one data entry box on the screen (or a button) you may want to use the SetFocus command to bring the cursor back to your original data entry box, so that next time the user scans a barcode, it will enter into the appropriate box. (Or even use the SetFocus command to allow user to scan a series of items in, in a particular order.)