


## SSBR Installation Instruction

The following is a list of all items included in the SSBR option kit.

1. 1 - keypad cover bezel ring stainless steel (6 hole) [20-00149-02]
2. 1 - 4/40 self tapping screw [30-00231-03]
3. 6 - 4/40 button head screws (stainless) [30—00067-01]

If any of the items listed above are missing please contact Eason Technology before installing option

1. Remove the four 4/40 button head hex screws.
2. Remove existing bezel and set aside.
3. Using the 4/40 self tapping screw supplied, tap the two untapped holes at the top and bottom of the bezel recessed area of the aluminum casting. (see figure below)

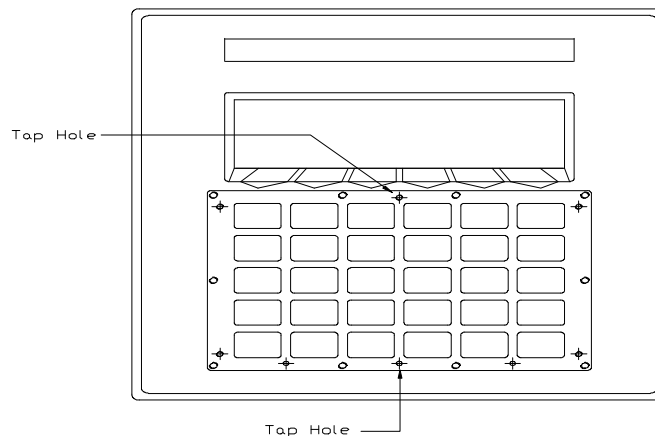

4. Install keypad cover bezel ring using the six 4/40 button head screws.
5. Press all keys to make sure that cover does not impede the travel of the keys.